HIDDEN DISPLAY

IF YOU DO NOT WANT YOUR CODE TO SHOW ON THE DISPLAY, PRESS "#", AND THEN "*", FOLLOWED BY THE CORRECT CODE. NO NUMBERS WILL APPEAR ON THE DISPLAY.

CHANGING BATTERIES

THE 4 AA BATTERIES PROVIDE 6 VOLTS OF POWER. GRADUALLY THE VOLTAGE WILL DECREASE, AND WHEN THEY REACH A PRE-DETERMINED VOLTAGE A "LO-BATT" WARNING WILL APPEAR ON THE DISPLAY, INDICATING IT IS TIME TO INSTALL FRESH BATTERIES.

EMERGENCY OPENING

1. IF THE BATTERIES ARE ALLOWED TO GET TOO LOW, THE SAFE WILL NOT FUNCTION NORMALLY. IF THIS EVER HAPPENS, PUT 4 FRESH AA BATTERIES IN THE EXTERNAL POWER SUPPLY, PLUG IT INTO THE JACK LOCATED BELOW THE KEYPAD, AND OPEN THE SAFE IN THE USUAL WAY. ONCE THE DOOR IS OPEN, REPLACE BATTERIES.

2. IF THE SAFE CANNOT BE OPENED BY THE METHOD DESCRIBED ABOVE, USE THE EMERGENCY KEY IN CONJUNCTION WITH THE DOOR KEY (AS DESCRIBED AT THE BEGINNING ON THIS USERS MANUAL), TO OPEN THE SAFE.

PRECAUTIONS

- KEEP THE USERS MANUAL, THE EMERGENCY KEY AND THE EXTRA DOOR KEY IN A SAFE PLACE, BUT NOT IN THE SAFE ITSELF.
- IF YOU EVER NEED TO USE THE EXTERNAL POWER SUPPLY, ALWAYS START WITH FRESH BATTERIES.

CONTACT

PROTEX SAFE CO., LLC
21212 VANOWEN STREET
CANOGA PARK, CA 91303
USA

PHONE: 1-818-610-8030
FAX: 1-818-610-8004
WEBSITE: WWW.PROTEXSAFE.COM

PROTEX
SAFE CO., LLC
■ Manufacturing ■ Distribution ■ Wholesale

USER'S MANUAL

Rev. 031506

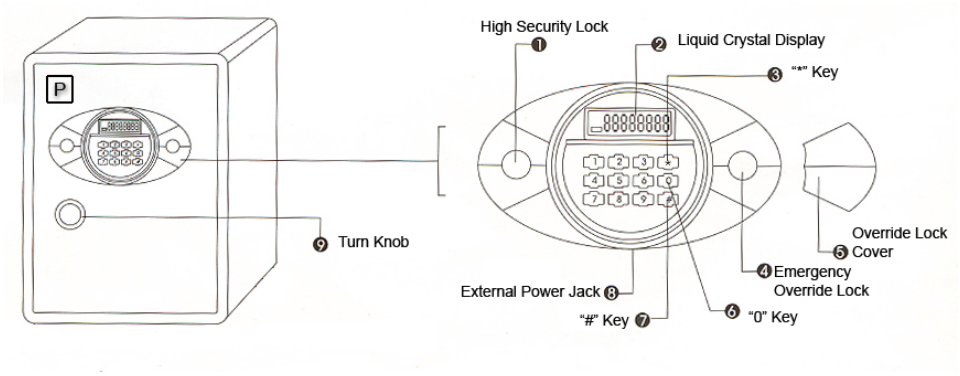

❶ HIGH SECURITY LOCK.

❷ LIQUID CRYSTAL DISPLAY. DISPLAYS A CALENDAR WHEN NOT IN USE.

❸ "*" MULTI-FUNCTION PROGRAM KEY.

❹ EMERGENCY OVERRIDE LOCK.

❺ OVERRIDE LOCK COVER.

❻ "0" KEY.

❼ "#" POUND KEY

❽ EXTERNAL POWER JACK.

❾ TURN KNOB (NOT INCLUDED IN ALL MODELS)

GETTING STARTED

1. REMOVE THE OVERRIDE LOCK COVER BY SLIDING IT TO THE RIGHT, EXPOSING THE LOCK FOR THE EMERGENCY KEY. INSERT THE TUBULAR EMERGENCY KEY AND TURN IT CLOCKWISE TO OVERRIDE THE ELECTRONIC LOCK. INSERT THE FLAT DOOR KEY INTO THE DOOR LOCK AND TURN IT CLOCKWISE. THE SAFE WILL BE UNLOCKED, TURN THE KNOB* (IF EQUIPPED) CLOCKWISE TO OPEN THE SAFE.

NOTE: FOR MODELS WITHOUT A KNOB THE DOOR KEY WILL OPEN THE SAFE.

2. INSTALL 4 AA BATTERIES IN THE BATTERY BOX LOCATED AT THE BACK OF THE DOOR. THE DISPLAY WILL INDICATE A SCANNING PROCESS, WHICH WILL SCAN TWICE AND THEN DISPLAY "GOOD".

3. WHEN INACTIVE, THE DISPLAY WILL SHOW DAY, DATE, TIME, AND BATTERY CONDITION.

SETTING A CODE

1. WITH THE DOOR OPEN, PRESS THE PROGRAMMING PUSH-BUTTON (GREEN) ONCE, WHICH IS LOCATED ON THE BACK COVER OF THE DOOR. INPUT A CODE OF ANY LENGTH FROM 1 TO 8 DIGITS, AND PRESS THE "#" KEY. THE LCD WILL SHOW "IN" (YOUR CODE IS NOW READY TO USE)

NOTE: IF ENTERING THE NEW CODE TAKES MORE THAN 10 SECONDS, THE DISPLAY WILL GO DARK (TIME OUT), REQUIRING YOU TO START THE PROCESS AGAIN.

2. TO CHANGE ANY EXISTING CODE, FOLLOW THE SAME PROCEDURE AS SETTING A CODE.

SETTING THE CALENDAR

PRESS "*" KEY AND ENTER 2 DIGITS FOR THE YEAR, 2 DIGITS FOR THE MONTH AND 2 DIGITS FO THE DAY. E.G. 06-03-14. THEN ENTER THE DAY OF THE WEEK 1~7 (1 FOR SUNDAY, 2 FOR MONDAY ETC.). THEN ENTER THE TIME. E.G. 13:05 FOR 1:05 P.M.

OPENING

1. INSERT THE FLAT KEY INTO THE DOOR LOCK.
2. PRESS "#".
3. ENTER THE CORRECT CODE AND PRESS THE "#" KEY
4. TURN THE KEY CLOCKWISE, AND IF THERE IS A KNOB TURN IT CLOCKWISE AS WELL TO OPEN THE DOOR.

CLOSING

TURN THE DOOR KEY COUNTER-CLOCKWISE AND REMOVE IT FROM THE KEYWAY, IF THERE IS A KNOB, TURN IT COUNTER-CLOCKWISE AS WELL.

ALARM FUNCTION

1. ENTERING THE WRONG CODE 3 CONSECUTIVE TIMES WILL CAUSE AN AUDIBLE ALARM TO SOUND. THE ALARM CAN BE RESET BY ENTERING THE CORRECT CODE FOLLOWED BY "#".

2. OPTIONAL ADDITIONAL SECURITY CAN BE ADDED BY PRESSING THE "0" KEY. THE DISPLAY WILL SHOW "ALMON", AND AN ALARM WILL ACTIVATE IF ANYONE ATTEMPTS TO SHAKE, TILT OR STRIKE THE SAFE.